

## SPECIFICATIONS

Model	DP-0HV01
Name	Heated Vest
Input	5V / 1.9A
Rated Power	9.5W
	131°F (High, Red Light), 122°F (Medium,
Three Heating Levels	Blue Light), and 113°F (Low, Green Light)
Shell	100% Polyester
Filling	100% Polyester

## INSTRUCTIONS

% Please use a portable battery pack with 2A or 2.4A USB output to power up this vest. %

- 1. Unzip the inner pocket and take out the USB cable.
- Insert the USB cable into the USB output on the battery. Then push the Power Button on your battery pack to turn it on. The thermal switch on the vest (near your chest) now cycles through red, blue, and green light for once, indicating the vest is plugged in.
- 3. Long press the thermal switch for 2 seconds and it will flash red light. The vest will enter the AUTO Mode. In AUTO Mode, the temperature of your vest will regulate from High to Medium after the red light flashes for 5 minutes.

- 4. If you prefer a certain heating level to the AUTO mode, short press the thermal switch. Then you can adjust temperature settings from High, Medium to Low. The red light stands for high heat. The blue light indicates medium heat and the green light signals low heat.
- 5. Press and hold the thermal switch for 2 seconds again to stop the vest from heating.

## CARE

- Take out the portable charger. Hand washing the vest with neutral detergent is recommended. Do not clean the vest by rubbing or kneading roughly. Drip dry the vest in a cool, well-ventilated place before the next use.
- 2. The heating elements in the vest are easily broken when washed in a washing machine. To maintain the quality and expand the service life of the vest, hand washing is highly recommended. Alternatively, you can put the vest into a laundry bag before machine washing.

## WARNING

- DO NOT plug the vest into your portable charger if you do not plan to use for a long time.
- 2. DO NOT hand wash the vest in hot water or with strong acidic detergent.
- DO NOT use the vest if it is wet. Please shut off power and stop using the vest immediately.
- The running time of the heated vest varies with the capacity of your portable charger.