




Dr. Prepare

# OSCILLATING TOWER FAN

Model: DDF-0BKDF7

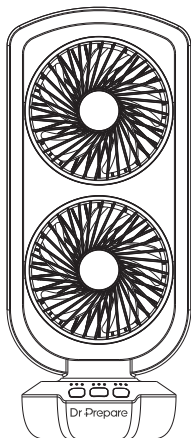

The user manual is meant to offer you a brief walkthrough of the device's features.

Please save the user manual for future reference.


Still need help? Please contact us via [support@drprepare.com](mailto:support@drprepare.com)

 **User Guide**

## SPECIFICATIONS

SKU	DDF-0BKDF7
Input	DC 5V
Timer	2 / 4 / 8 Hours
Speed setting	Low / Medium / High
Horizontal oscillation	105°
Vertical rotation	270°
Size	15.7" (H) x 5.5" (Φ)
Color	Black

## IDENTIFYING PARTS

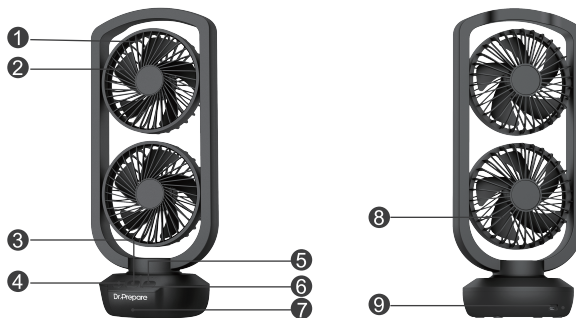

- ① Front grilles
- ② Blades
- ③ Power
- ④ Swing (Oscillation)
- ⑤ Timer

- ⑥ Indicator lights
- ⑦ Pedestal
- ⑧ Back grilles
- ⑨ USB-C input port

## INSTRUCTIONS

1. Place the fan on a firm and level surface before using.
2. Press the Power Button to turn on the fan.

Press Power Button once	Low speed
Press Power Button twice	Medium speed
Press Power Button for three times	High speed
Press Power Button for four times	Turn off

3. Oscillation

Press Swing (Oscillation) Button once	Start oscillation
Press Swing (Oscillation) Button twice	Stop oscillation

4. Timer settings

Press Timer Button once	2 Hours
Press Timer Button twice	4 Hours
Press Timer Button for three times	8 Hours
Press Timer Button for four times	Turn off the timer

## WARNING

1. Do not put fingers or other objects into the grilles.
2. Ensure the fan is turned off and unplugged before cleaning and maintenance.
3. To clean the grilles and blades, we advise you to use a soft cloth to gently wipe off the dust.
4. Do not use gasoline or other chemicals to clean the fan.

5. Do not immerse any part of the fan in water or other liquids.

6. For storage, we kindly advise you to leave the fan with this manual in its original packaging in a cool, dry place.

## WARRANTY

- Dr.Prepare products are covered by a 12-month limited warranty from the original purchase date. If any problems occur, please contact our support team.
- We only provide after-sales services for products that are sold by Dr.Prepare or retailers and distributors authorized by Dr.Prepare. If you have purchased your unit from other channels, please contact your seller for more information about return and warranty.

## CUSTOMER SUPPORT

- If you have any questions or concerns, please send us an email at [support@drprepare.com](mailto:support@drprepare.com)